


Photo PCB production

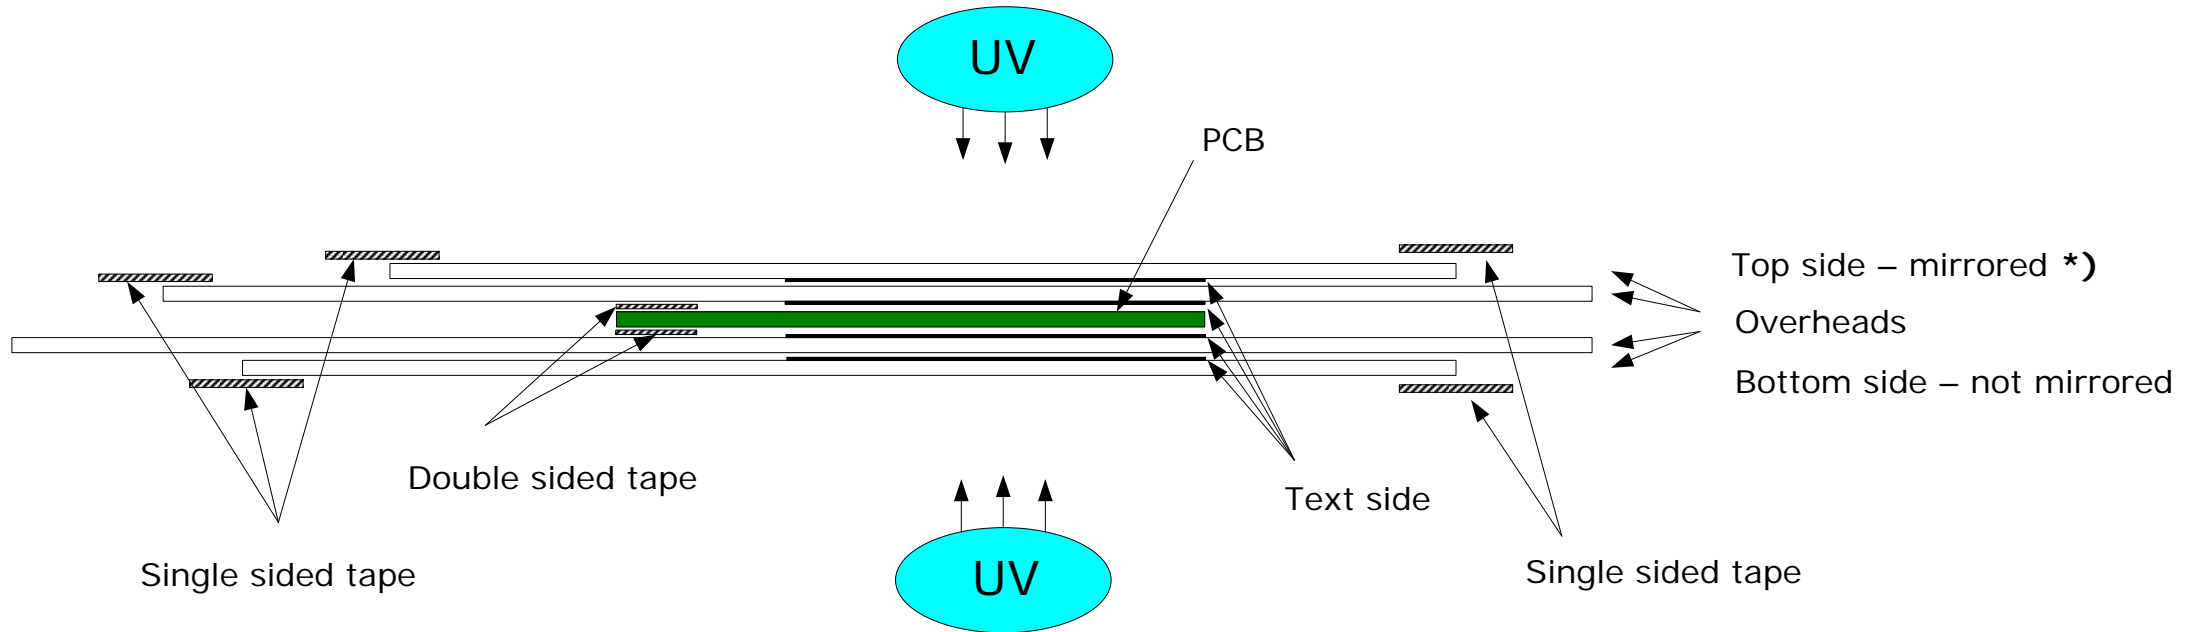

***) NB!**

All top side PCB files on this web site have already been mirrored.

How to fit it all together

- 1) Align the two top overheads and tape them together.
- 2) Align the two bottom overheads and tape them together.
- 3) Now align the top and bottom overheads and tape them together.
- 4) Place double sided tape on the bottom side of the pcb, flip the top overheads to one side and place the pcb on the bottom overheads.
- 5) Place double sided tape on the top side of the pcb and gently flip the top overheads down onto the pcb.
- 6) The pcb can now be exposed to UV light. During exposure remember to cover the opposite side with black paper or cardboard.